



KLS01 700MM DIA LAZY SUSAN INSTALLATION GUIDE

TOOLS REQUIRED: PHILLIPS SCREW DRIVER, DRILL & 2MM DRILL BIT

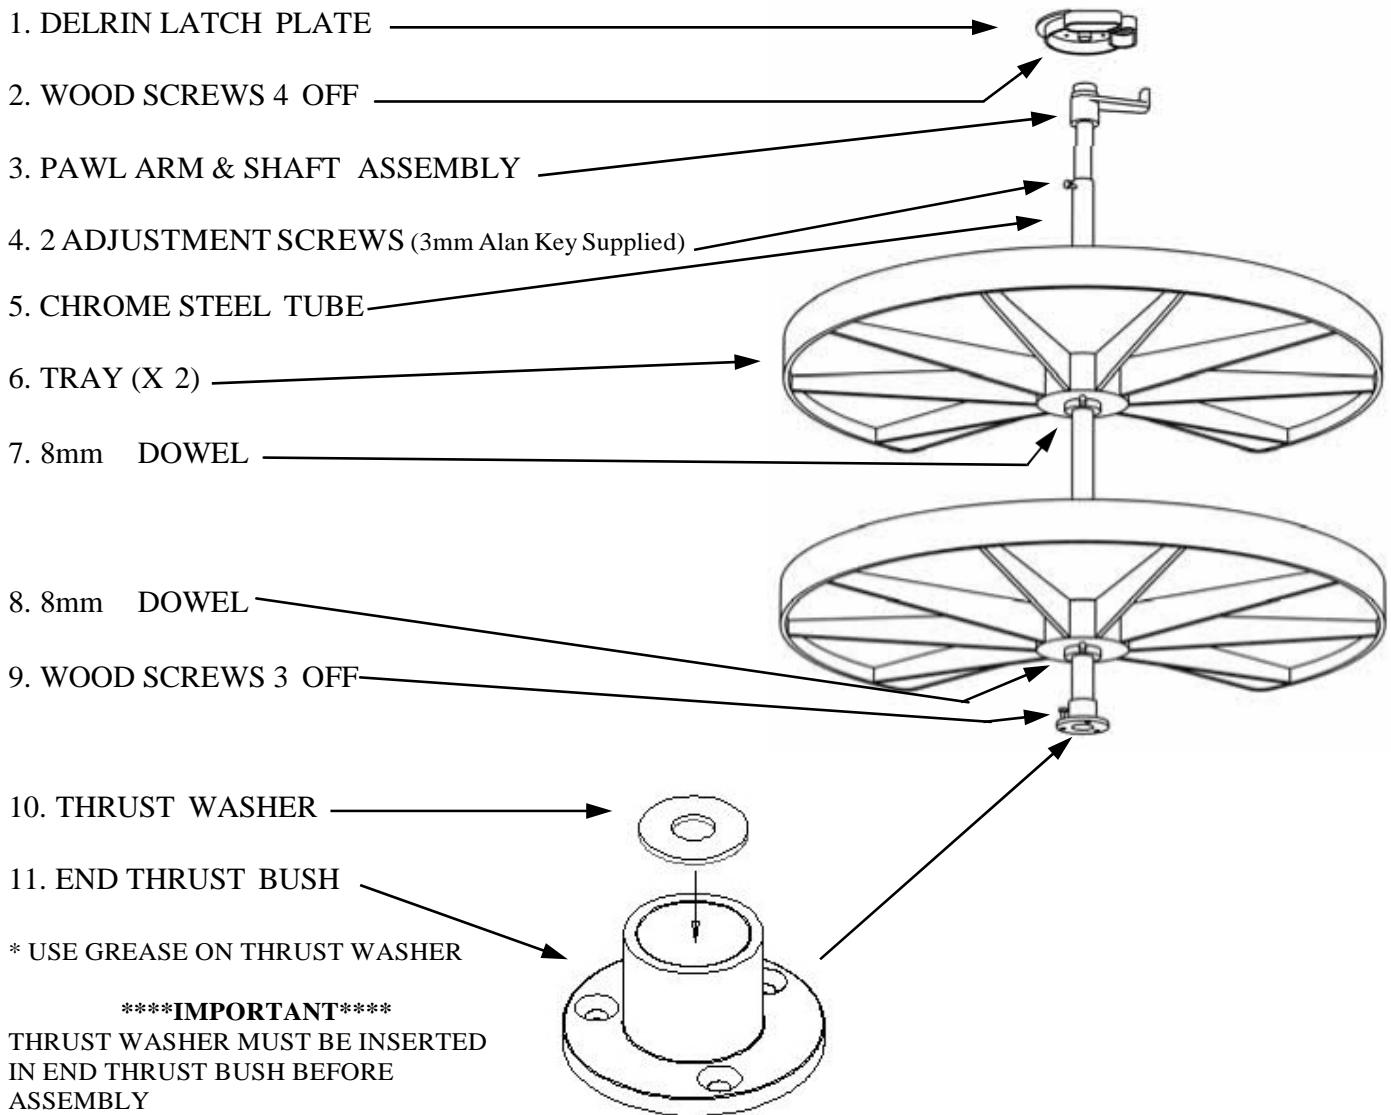


- a) Using bottom template provided on the reverse side mark holes. Check you are satisfied with shelf position then drill as shown and fix end thrust bush with screws provided.
- b) Using template drill top and fix delrin latch plate with screws provided.
- c) Slide two shelves on shaft assembly.
- d) Fit shaft into end thrust bush and slide up pawl arm shaft assembly. Locate in latch plate and tighten adjusting screw (lightly).
- e) Locate trays to tube with 8mm \varnothing dowels provided.
- f) Position cut out section of tray to correct setting and tighten adjusting screw.


BOTTOM TEMPLATE

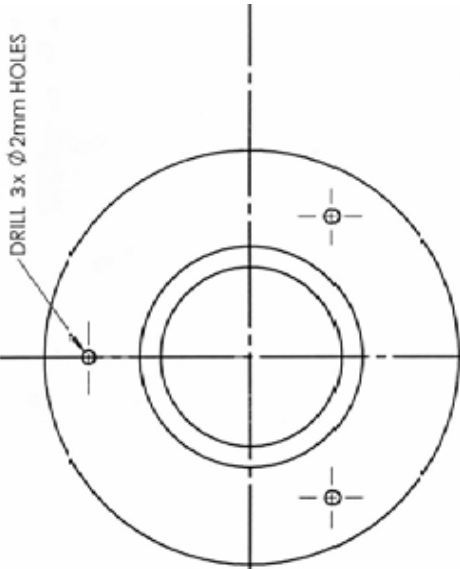


BOTTOM END THRUST BUSH

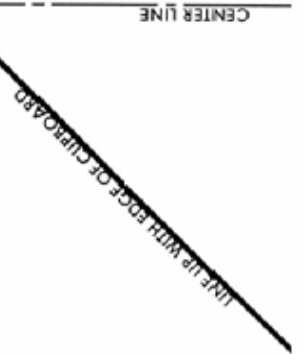

TOP TEMPLATE

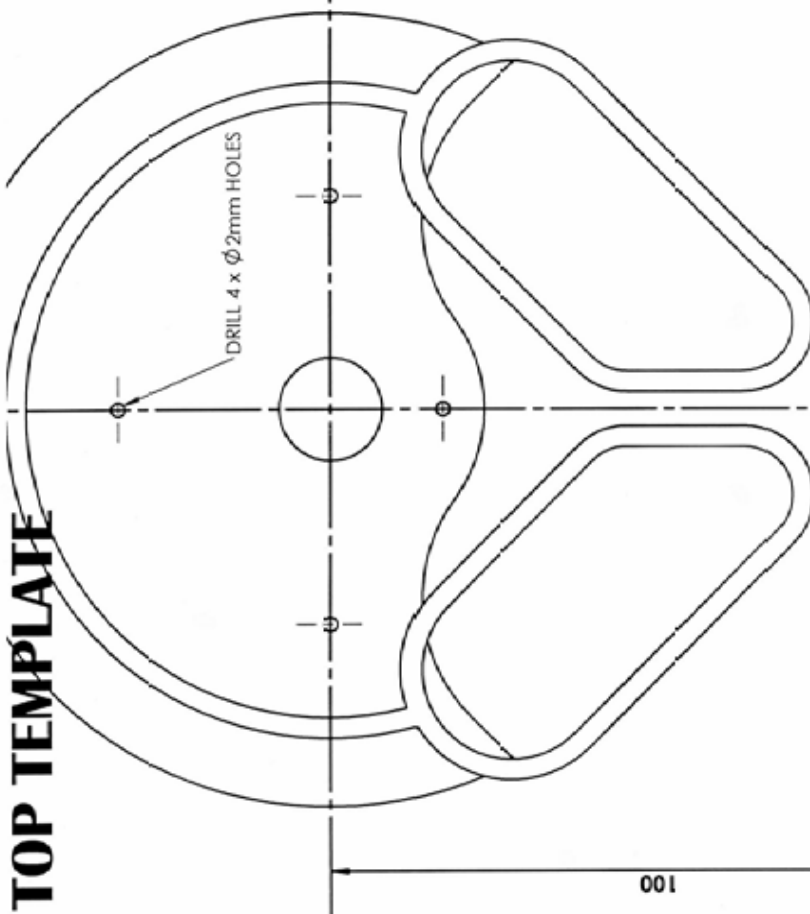

DELRIN LATCH PLATE

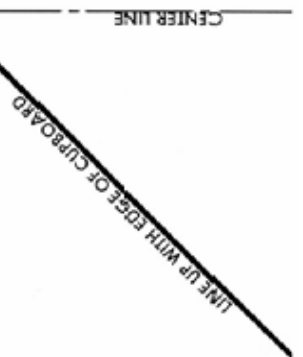

100