


KRB10 HOLE IN ONE BENCH TOP BIN INSTALLATION GUIDE


- 1) Mark position and cut 210mm dia hole through bench top.
- 2) Cut hole and test fit stainless steel ring into hole in bench.
- 3) Use construction adhesive to hold stainless steel ring in place.

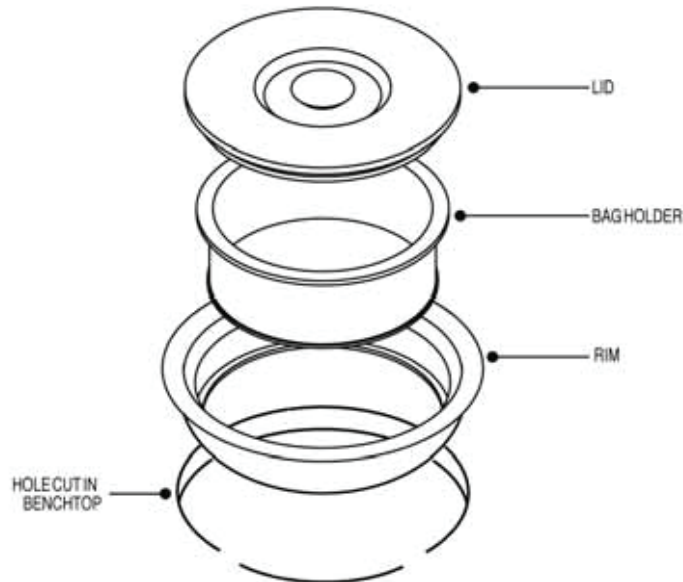

If the use of a bag is desired;
To fit bag, follow sketches below using small to medium garbage bags;

- 1) Fig. 1 Slip bag over bottom of bag holder.
- 2) Fig. 2 Pinch bag tight around holder and fold excess around.
- 3) Fig. 3 Stretch rubber strap and place over bag and bag holder to secure bag.

Slip bag through top of rim and feed through until bag holder sits on bottom edge of rim body. Bottom of bag should be supported in an appropriate sized bucket.

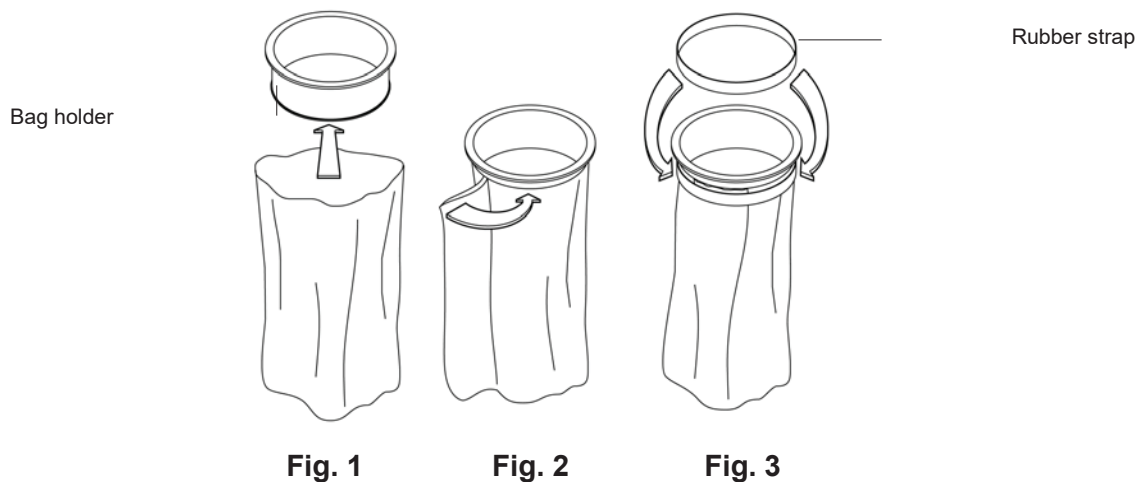

How to Care for your New Kimberley Waste Bin

Please make sure you thoroughly read and understand the instructions and follow them carefully.

1. For best results and longevity, always use a bin liner inside your waste bin.
2. Always make sure the liner is installed without obstructing any of the bin's moving parts.
3. Do not overload your waste bin.
4. Do not push the rubbish down to try to compact the waste.
5. Do not place heavy items on top of the bin lid.
6. Never try to close your waste bin with your feet.
7. Never force the waste bin closed.
8. Use a soft cloth and warm mild soapy water to regularly clean the interior and exterior of the waste bin. Do not use harsh detergents.
9. When washing the waste bin, use a soft cloth to dry the waste bin.
10. Be careful to thoroughly dry any areas of metal to avoid rust and damage.
11. Do not use the bin outside or expose it to the weather.
12. Do not place the waste bin near a heater or hot device.